


Relay K524 Operating Instructions

I Hardware connection

1.K524 Interface connection





2.K524Connection of current contactor

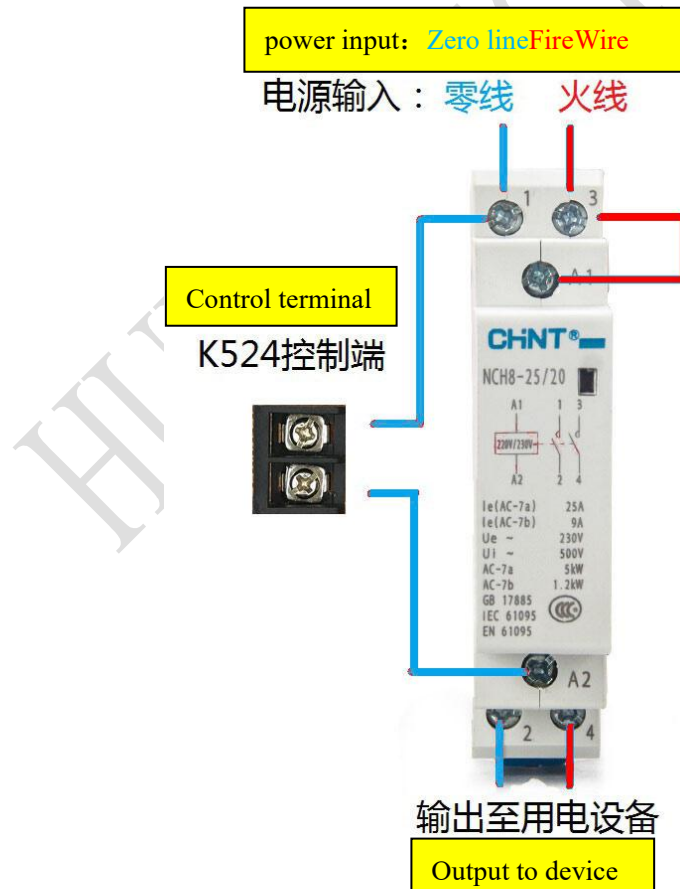


II Software settings


1. Open HDPlayer, find the sending card, enter "Control" → "Device Information" → "Relay Settings" interface.

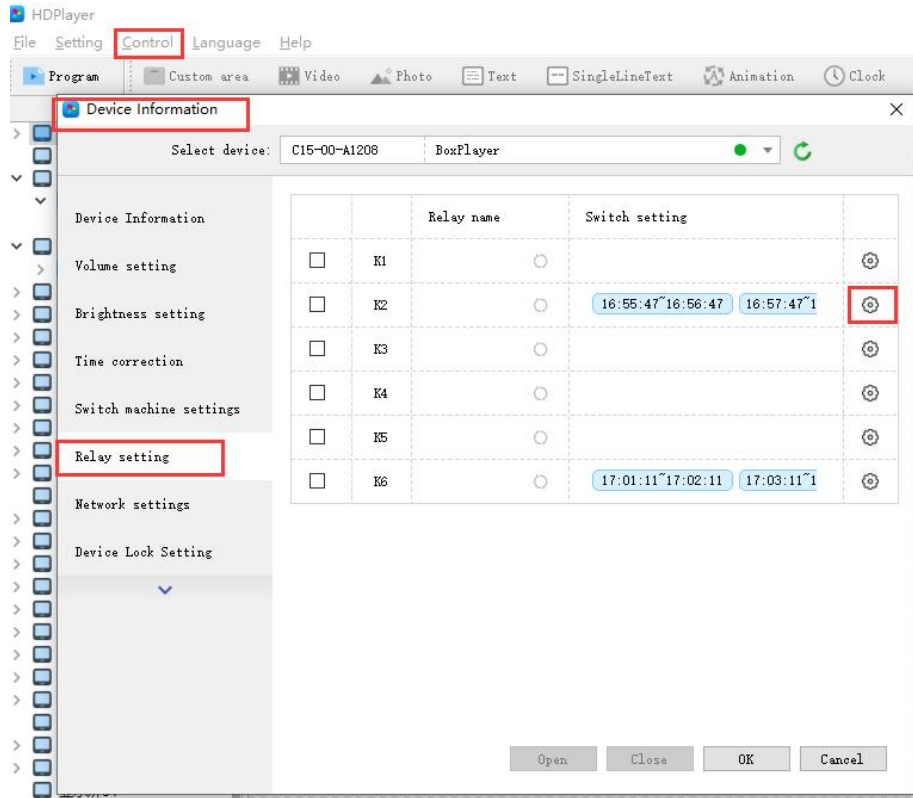

2. Click the  setting button to enter the time setting interface and set the time for ports K1-K6.

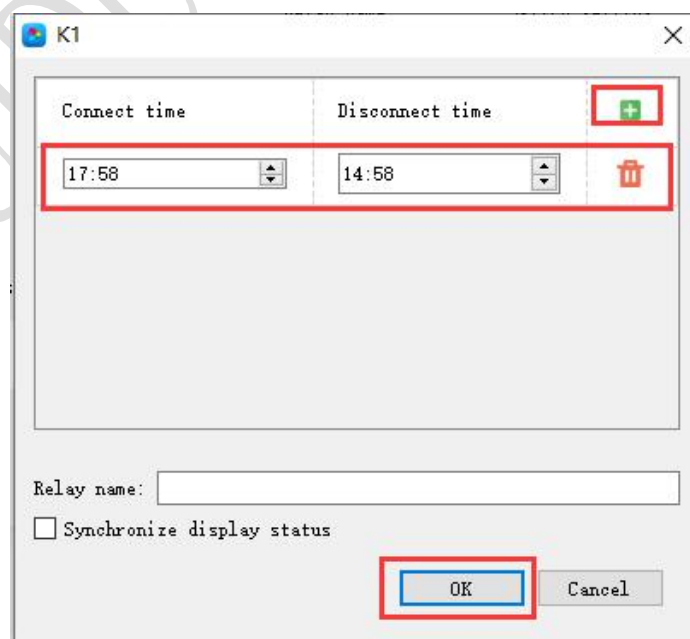


3. Off status

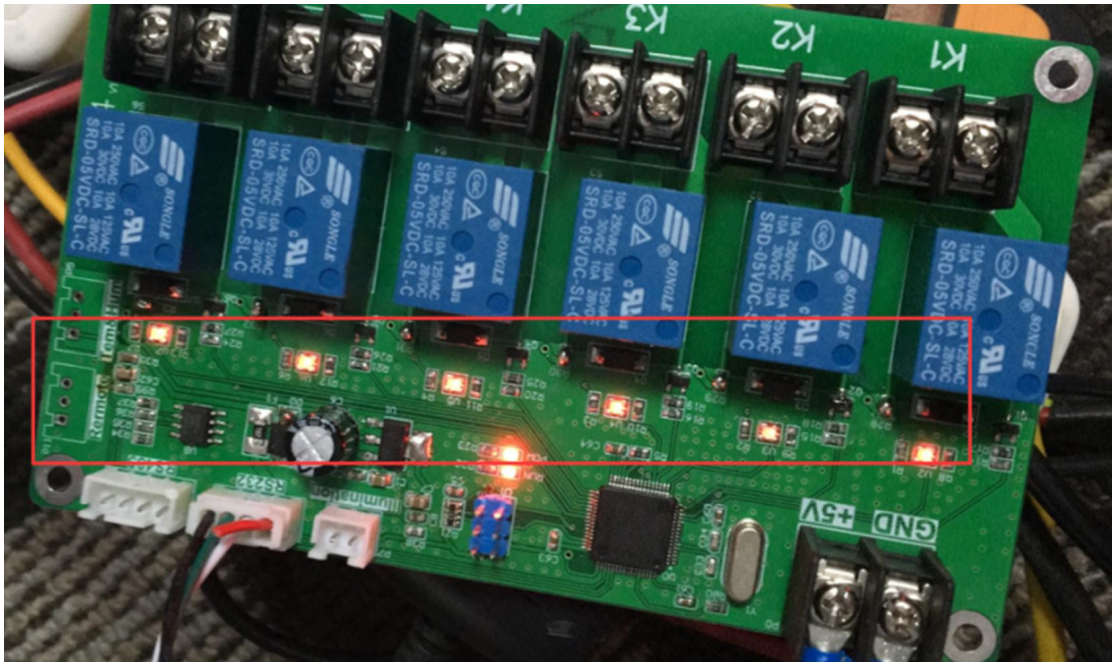

- 1) Observe the status of the relay. Yellow indicates that the relay is not detected, gray indicates that the relay has been detected and is in the off state. K1-K6 on the hardware side of the relay lights up red;
- 2) Use a multimeter to short connected the positive and negative poles of K1-K6 respectively. The multimeter will not make a sound;


4. Power on status

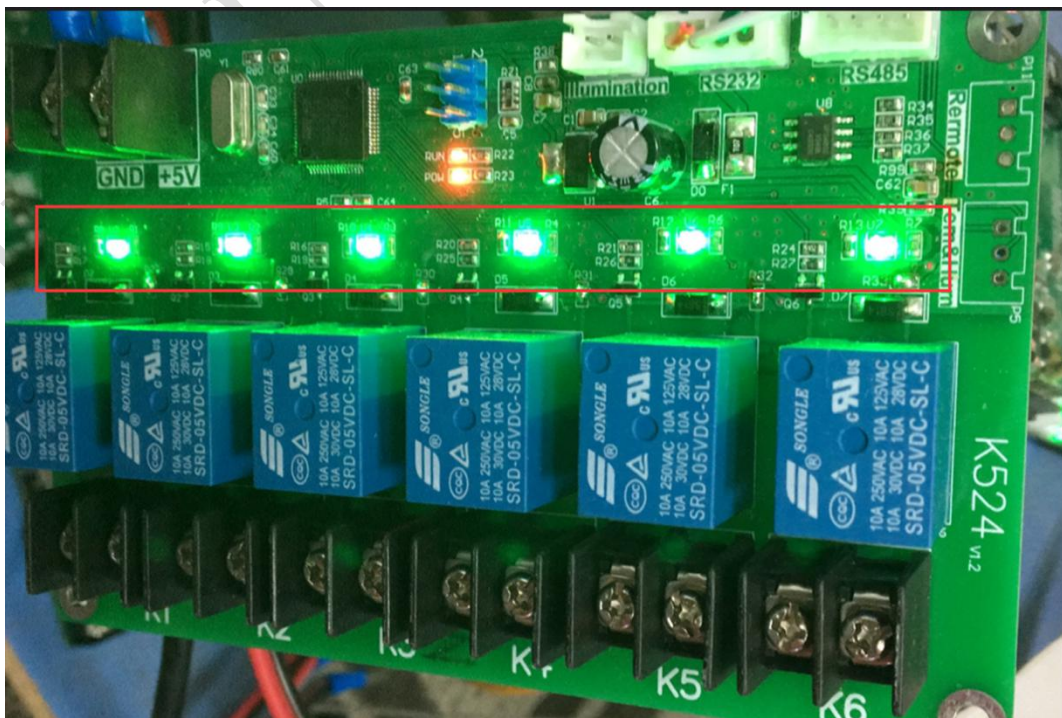

- 1) Observe the relay, K1-K6 indicator light should be green;
- 2) Use a multimeter to short connected K1-K6 respectively, the multimeter should be able to make a sound;

III Brightness setting

1. Enter to “Control” → “Brightness Setting” → “Auto Mode” and confirm.

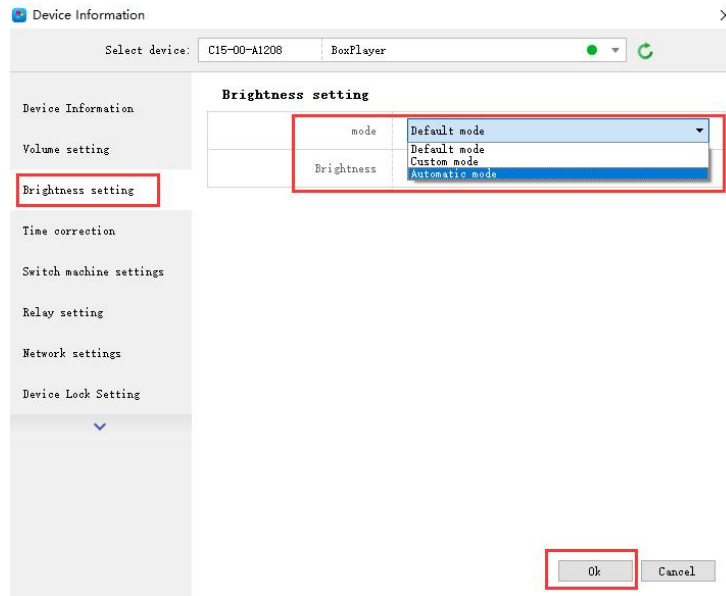

2. Test methods

Hold the brightness probe with your hand Observe if the screen brightness changes;

